

325mm

## Brass finishes



Dark Bronzed Brass



**Bronzed Brass** 

## **Plated finishes**




Chrome



Brushed Nickel

<sup>\*</sup>Each hand finished surfaces are unique and variations may occur.

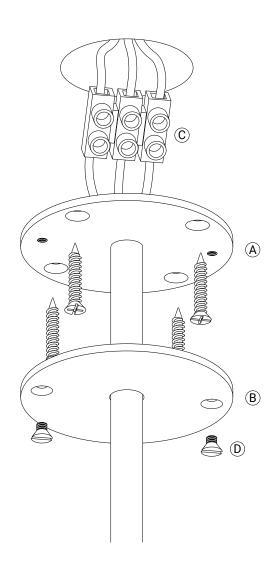

## Installation - recessed ceiling mount

- 1. Make sure to turn off the main power before installation.
- 2. Drill  $\emptyset$  35 50mm hole to the ceiling to allow the terminal block (C) to fit through.
- 3. Connect live wires to the fitting (A) using the terminal block (C) supplied.
- 4. Place wiring into the ceiling, and attach the fitting (A) to the ceiling by appropriate screws (not included).
- 5. Carefully slide up the cover plate (B), then secure it with the ceiling mount screws (D).
- 6. Insert the supplied bi-pin lamp to the lampholder.
- 7. Screw in the glass shade to the lampholder.
- 8. Turn on the main power.

Caution: Installation must be performed by certified electrician.

